

Distribuitor:

FLAME POWER SRL
021-3121727 ; 0744-340566
contact@arzatoare.ro ;
www.arzatoare.ro



DKO 974/976
DKO 974 N/976 N

Oil Burner Safety Control

For 1- or 2-stage oil burners up to 30 kg/h throughput and intermittent operations with or without oil preheating

Flame detection:

- Photoresistor MZ 770 S
- Infrared-flicker detector IRD 1010.1
- UV flame sensor sensor UVD 970

INTRODUCTION

The DKO 974/976 oil burner safety control boxes are suitable for oil burners with or without preheater with throughputs up to 30 kg/h. They will be approved and certified according to the applicable European standards and regulations.

The microprocessor-based programming sequence ensures extremely stable timings independent of voltage variations, ambient temperature and/or switch-on cycles. The built-in information system not only provides a continuous monitoring of the actual state of the box (very helpful especially for monitoring the start-up phase) but also informs about the cause of a possible lock out. The lock out cause is stored in such a way that it can be retrieved even after a power failure.

The control box is designed for maximum safety in case of fluctuations in the voltage supply. If the mains voltage drops below the permitted level, operation is interrupted and the control box automatically prevents the start sequence from being repeated. In this way, the safety of the system is not put at risk by a drop in the mains voltage. This low-voltage protection works not only during start-up but also permanently during operation.

T PES AVAILABLE

DKO 974	1-stage operation with override contact
DKO 976	2-stage operation with override contact
DKO 974N	1-stage operation without override contact
DKO 976N	2-stage operation without override contact

CONSTRUCTIONAL FEATURES

The control box circuitry is protected by a flame resistant, transparent plug-in type plastic housing. A central fixing screw locks the control box to the wiring base. The plug-in control box incorporates the microprocessor based timer, flame check and reset circuits. Manual reset from lock out and set to lock out is provided by a push button with an integrated lock out signal lamp. The wiring base S98 is equipped with spare-and extraterminals and allows together with a variety of cable entry points utmost flexibility of electrical wiring.

The DKO 974 is compatible with the TF 834, TF 834.2. The DKO 976 is in addition compatible with the TF 804, TF 804.2, TF 836, TF 836.2.

Using the DKO 976 as a replacement for the TF 804 or TF 804.2, the flame sensor FZ 711 S must be replaced by its plug compatible type MZ 770 S. On flame supervision by a photo-cell, type MZ 770 S has to be connected to terminals 1 and 2. Older IR-Sensors of the types IRD 910 and IRD 911 is not possible.



TECHNICAL DATA

Operating voltage 220 / 240 V (-15... +10%)

or 50 Hz (-5 %)

110 / 120 V (-15... +10%)

60 Hz (-5 %)

10 A fast, 6 A slow

ca. 12 VA

Fuse rating

Power consumption

Max. load per output

- term. 3 ignition trafo 1.0 A, cos φ 0.2

- term. 4 motor 2.0 A, cos φ 0.4

- term. 5 + B solenoid valves 0.5 A, cos φ 0.4

- term. 6 oil preheater 2.0 A, cos φ 1.0

- term. 7 alarm indicator 0.5 A, cos φ 0.4

total load 4.0 A, cos φ 0.4

max. 16 A during 0.5 sec

Reset time from lock out none

Re-cycling / repetition (max. 4x) after a loss-of-flame during operation

Flame detectors < 2 m length of cable

MZ 770 S side-on and

end-on viewing

better 6 Lux

IRD 1010.1 side-on or end-on viewing

UVD 970 end-on viewing

Weight incl. Wiring base 190 g

Mounting position any

Protection class IP 40

Approved ambient parameter max. 95% bei 30 °C

for control and flame detector 0 °C... +60 °C

- for operation -20 °C... +80 °C

- for storage

Build-up of ice, penetration of

water and condensing water are

Approvals according

to European standards

EN 230, as well as all other relevant Directives and

standards

Table of timings (sec.)

Model	max. warm-up time oil preheater ta	Pre-purge and pre-ignition time tv1	Stray light monitoring tf	safety time ts	Post-ignition time after V1 tn	delay time to V2 DKO 976 only tv2
05	400	15	5	5	7	20

1. Information system

The information system is microprocessor based and reports on all aspects of burner control box operation and flame supervision. It informs continuously about the actual programming sequence the unit is just performing. Besides monitoring of the programming sequence it also allows to identify errors during start-up of operation without any additional testing devices. The automatically performed diagnoses is a valuable tool which facilitates service/maintenance work and therefore saves costs. The analyses of the error cause can be done directly on stage or if not possible afterwards as the lock out reason is stored in a non-volatile lock out mode memory.

The information system communicates with the outside world using a LED (the used Flash-Code is similar to the Morse-Code). The messages are optically transmitted by flashing appropriately a LED. Using an (optional) additional terminal the messages can be recorded and displayed in easy readable form.

1.1 Programming sequence display

The built-in microprocessor controls not only the programming sequence but the information system too. The individual phases of the programming sequence are displayed as Flash-Code.

The following messages can be distinguished:

Message	Flash-Code
waiting for control	.
thermostat	
pre-ignition	.
tv1	
safety time ts	.
post ignition tn	
delay 2nd stage	.
tv2	
running	_
low mains voltage	_
Internal fuse defect	_
> control box defect	

Description

| = short pulse

■ = long pulse

 
. = short pause

= long pause

1.2 Lock-out diagnoses

In case of a failure the LED is permanently illuminated. Every 10 seconds the illumination is interrupted by a flash code, which indicates the cause of the error. Therefore the following sequence is performed which is repeated as long as the unit is not reset.

Sequence:



Error diagnosis		
Error message	Flash-Code	Possible fault
lock out	■ ■ ■ ■	within lock out safety time no flame establishment
stray light	■ ■ ■	stray light during monitored phase, detector may be faulty
limit thermostat time-out	■ ■	contact of limit thermostat does not close within 400 sec.

Flash-Code for manual lock out
manual/external lock out
(see also 4. lock out and reset)

2. Flame control

The following detectors can be used for flame supervision:

- for yellow oil flame: photoresistor MZ 770 S
 - for blue or yellow flame: infrared-flicker detector type IRD 1010.1 or as an alternative the UV solid state flame sensor LIVD 970

Generally, the no flame signal is generated at light levels below 3 Lux with respect to the operating cycle of the control. According to EN 230 stray light safety level has to be established in conjunction with the accompanying burner. Connecting the IRD 1010.1 or UVD 970, the correct wiring has to be observed.

2.1 Stray light monitoring

The stray light check is performed at the end of the pre-purge time for the duration as mentioned in the table of timimas.

3. Burner control

With oil preheater

The fuel heater of the burner has to have a temperature control switch. The closing contact-switch of the heater has to be connected between terminals 4 and 6. A special contact in the control unit connects the thermo-switch of the heater as soon as the burner is operating and a photocurrent is generated. Therefore an interruption of the burner operation due to a decrease in oil temperature is prevented (e.g. in case of high oil flow).

According to EN 230 A 2.1, the short circuiting of the thermoswitch is allowed only for an oil flow of max. 10 kg/h oil. Burners with a higher throughput have to shut down if the oil temperature gets below the allowed minimum. In such a case the thermo-switch has to be put in the phase-circuit and terminals 4 and 6 have to be connected with a link. The contact of the release thermostat of the oil preheater is monitored. If the contact does not close within the pre-defined time (400 sec), the programmer goes into lock out mode.

Therefore excessive oil temperatures in the preheater over long periods can be prevented avoiding cracking of the oil and subsequent blocking of the preheater or nozzle.

Without oil preheater

In such a case the terminals 4 and 6 have to be connected with a link.



Attention

The switch of the release thermostat for the oil preheater must never be linked between 4 and 6 or 6 and 9!

During lockout, the preheater will not be separated from power. This could lead to a defective pre-heater due to burn out its heating winding.

4. Lock out and reset

The unit can be reset or brought into lock out mode in two different ways:

Internal

In the lock out case the unit can be reset by pushing the built-in button meaning a new start-up cycle is performed.

External

Instead of using the built-in lock out button the same function can be achieved by using an external button which connects terminal 9 with A (see also circuit and block diagram).

If the pushbutton (internal or external) is pressed during normal operation or during the start sequence for more than 3 sec. and afterwards released, the control box will perform a shutdown.



Please note

The unit can only be brought to lockout mode or be reseted if power is applied to the unit.

5. Low-voltage protection

at 220 / 240V (110 / 120V) nominal voltage

The mains voltage has to be more than 187 V_{eff} (94 V_{eff}) in order to allow the unit to perform a start-up.

The mains voltage is not only monitored in the start-up phase but also permanently during operation. If the voltage drops below < 160 V_{eff} (80 V_{eff}) during start-up or run time the control box proceed to safety shut-down and goes into a waiting status. If the voltage rises again, the control box performs automatically a start-up as soon as the mains voltage is > 187 V_{eff} (94 V_{eff}).

6. Safety

The design and control sequence of the DKO 974/976 controls will comply with the currently applicable standards and regulations (see also TECHNICAL DATA).

7. Mounting and electrical wiring

Wiring base:

- 3 earth terminals with additional terminal for burner earthing
- 3 neutral terminals with internal permanent connection to neutral terminal 8
- 2 independant spare terminals (S1 and S2)
- extra terminals A, B and C are standard (wiring base S98 12-pin)
- 2 slide-in plates and 2 easy knock out holes plus 2 knock out holes in the base bottom facilitate the base wiring



Please note

To assist trouble-free operation the main neutral connection terminal 8 in the wiring base must be fully tightened. The terminal screws are already in the undone position. To connect a wire to the terminal, the screw only needs to be fastened.

General: The control box and detector probes should not be subjected to excessive vibration.

1. Important notes

- The controls must be installed by qualified personnel only. The relevant national regulations have to be observed.
- On commissioning the wiring has to be carefully checked according the appropriate diagram, Incorrect wiring can damage the unit and endanger the installation.
- The fuse rating has to ensure that the limits specified in TECHNICAL DATA will not be exceeded. If these precautions are not observed, the effect of a short circuit can cause severe damage to the control and installation.
- For safety reasons a minimum of one control shutdown per 24 hours has to be observed.
- Disconnect the mains before the control box is plugged in or out.
- The control box is a safety device and must not be opened!

2. Function control

For safety reasons the flame detection system should be tested on commissioning the installation as well as after a service or longer shut-down.

a) Start-up with covered flame detector

- After lock out safety time is over the unit has to go into lock out mode!

b) Start-up with exposed flame detector

- After 12 sec prepurge time the unit has to go into lock out mode!

c) Normal start-up with burner in the normal position, cover up the flame detector

- After start-up, and end of lock out safety time the unit has to go into lock out mode!

3. Fault finding

The built-in information system facilitates the trouble shooting in the case of problems occurring during start-up or during operation.

A list of possible lock out messages can be found in APPLICATION FEATURES chapter 1.2.




Please note:

The control box is locked in lock out mode and the reason for the lock out is displayed until the control box is reset, either by an internal or external reset (see also subject 4. Lock out and reset).


Removing the control box from its wiring base or by interrupting the supply line may not reset a lock out (according to EN 230). Therefore, by applying power, the fan motor/nozzle preheater switches on for 2-3 secs. before the control box goes to lock out again and the cause of the last lock out.

Error	Possible fault
Burner not working	<ul style="list-style-type: none"> - Thermostat circuit open - Faulty electrical wiring - Oil preheater defective - Mains voltage < 187 V (< 80V) - Terminal A continuously on power (e.g. terminal A is used as a support terminal)
Fan motor/nozzle preheater starts for a short period of time, control box goes to lock out	- Control box has not been reset
Burner starts, flame not established, lock out	<ul style="list-style-type: none"> - Stray light on flame detector - No ignition or no fuel
Burner starts, flame established, after safety time, lock out	<ul style="list-style-type: none"> - Dirty or faulty flame detector - Insufficient light on detector - Sensitivity adjustment too low on IRD

CIRCUIT AND TIMING DIAGRAM DKO 974

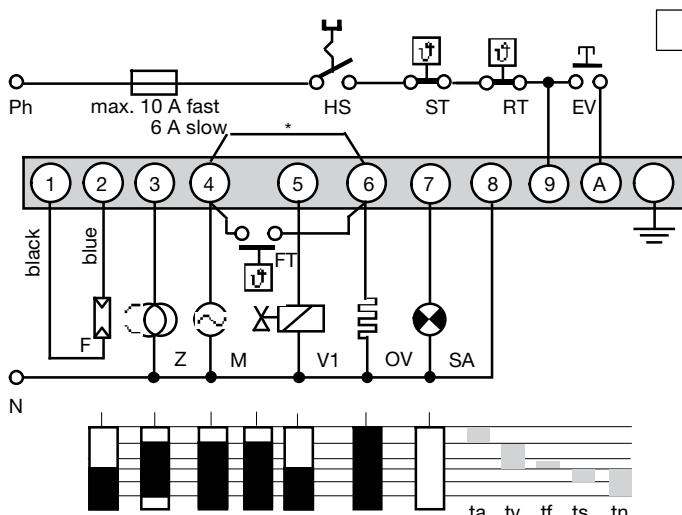


IRD-/UVD-CONNECTION

 


HS Mains switch
ST Limit thermostat
RT Control thermostat
EV External reset and lock out button
F Flame detector MZ 770 S
(IRD 1010.1/UVD 970 see separate diagram)
Z Ignition
M Burner motor
FT Release thermostat oil preheater
* For burners without fuel heaters term.
4 and 6 have to be connected with a link
V1 Oil solenoid valve
OV Oil preheater
SA External lock out signal

ta Pre-heat-time oil preheater
tv Pre-purge and pre-ignition time
tf stray light monitoring
ts Lock out safety time
tn Post-ignition time

CIRCUIT AND TIMING DIAGRAM DKO 976

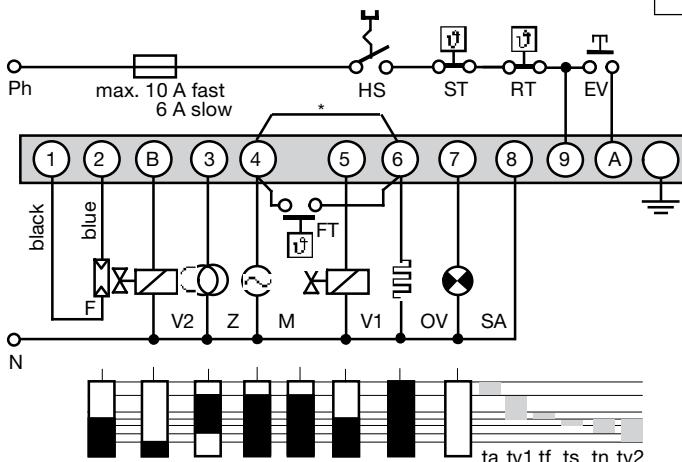


IRD-/UVD-CONNECTION

 


HS Mains switch
ST Limit thermostat
RT Control thermostat
EV External reset and lock out button
F Flame detector MZ 770 S
(IRD 1010.1/UVD 970 see separate diagram)
Z Ignition
M Burner motor
V1, V2 Solenoid valves
OV Oil preheater
FT Release thermostat oil preheater
* With burners without fuel heaters term.
4 and 6 have to be connected with a link
SA External lock out signal



ta Pre-heat-time oil preheater
tv1 Pre-purge and pre-ignition time
tf stray light monitoring
ts Lock out safety time
tn Post-ignition time
tn2 Delay time to oil V2

BLOCK DIAGRAM DKO 974/976

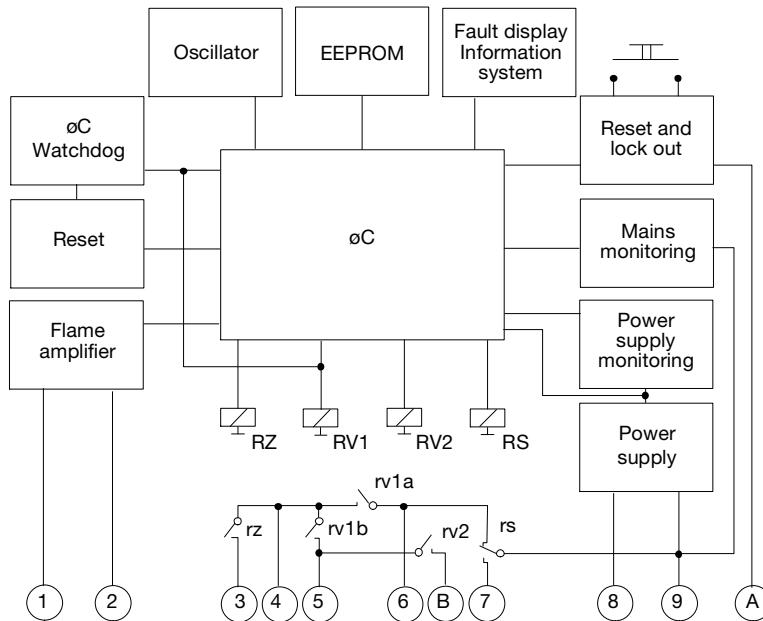

BLOCK DIAGRAM DKO 974/976

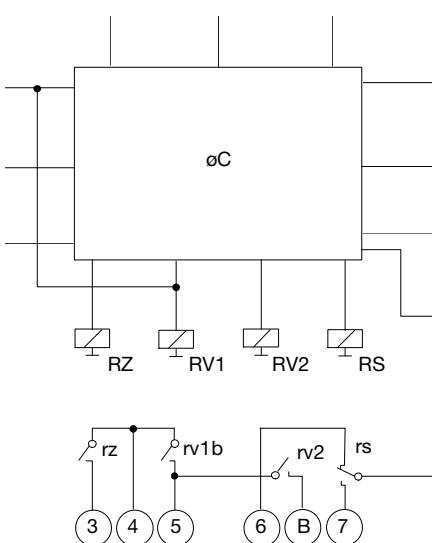

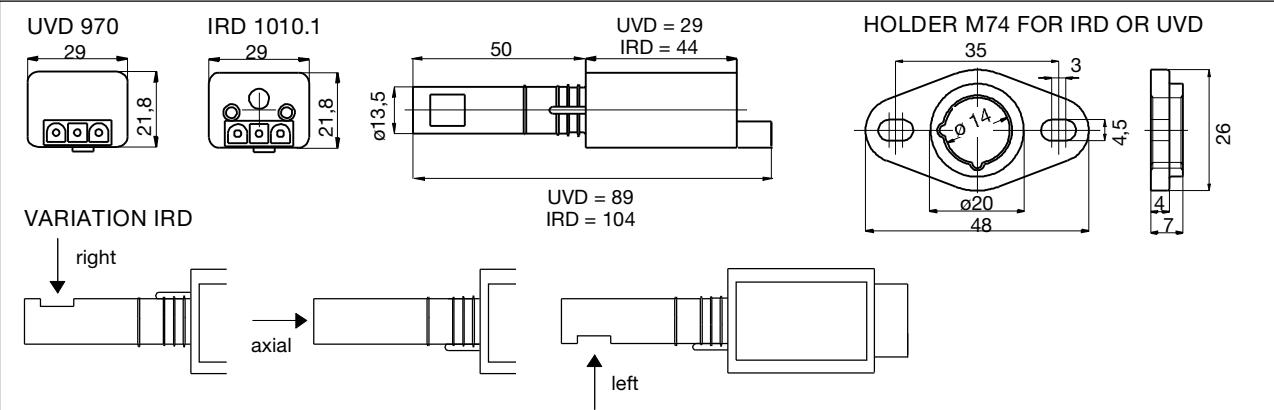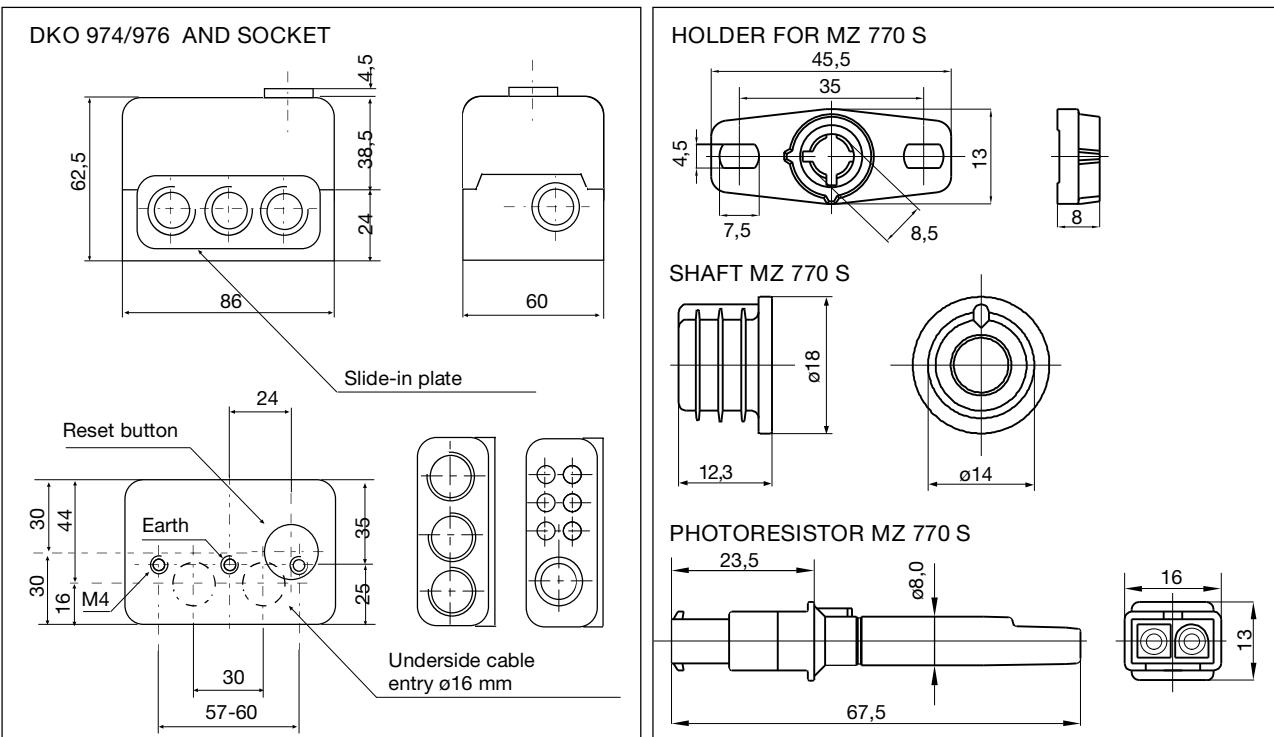

ORDERING INFORMATION		
ITEM	DESIGNATION	ITEM NO.
Control box or or or	DKO 974 Mod. 05 DKO 976 Mod. 05 DKO 974 N Mod. 05 DKO 976 N Mod. 05	0314005 0316005 0314705 0316705
Socket	Wiring base S98 12-pin	75310
Insert plate optional	PG-Plate	70502
Flame detector optional optional	Cable entry plate MZ 770 S MZ 770 S with shaft IRD 1010.1 right IRD 1010.1 end-on IRD 1010.1 left UVD 970 Holder for MZ 770 S Holder M 74 for IRD or UVD Plug type, 3 core cable, 0.6 m with tag wire ends Plug type, 2 core cable, 0.5 m with tag wire ends	70503 50001 51001 16501 16502 16503 16702 59101 59074 7236001 7225001
The above ordering information refers to the standard version. Special versions are also included in our product range.		
Specifications subject to change without notice.		

DKO 974/976
DKO 974 N/976 N

satronic
A Honeywell Company