021-3121727 : 0744-340566





FLAME RELAY

HANDBOOK



INTRODUCTION

The flame relay FFW 930.1 controls and monitors semi automatic burners. It is also used together with an oil- or gas burner control box for special, fully automatic control- and monitor functions.

The FFW 930.1 is fully compatible with the FFW 930

CONSTRUCTIONAL FEATURES

The flame amplifier circuit and a relay with 2 change-over contacts are housed and protected in a non-inflammable. non-transparent, plug-in type plastic case. A flame indicator bulb and the central locking screw are placed on top of the housing.

The wiring base is equipped with additional loop terminals and together with the various possibilities for cable entry enables an universal wiring.

FUNCTION

Depending on the wiring, a semi or fully (only together with a burner control box) automatic control of a burner is possible. As soon as a flame signal is detected, the built-in relay switches on, the relay contacts change over and activate the various burner components. Simultaneously, the flame indicator bulb on the top of the unit switches on.

TECHNICAL DATA

Supply voltage 220 / 240 V (-15... +10%) 50 Hz (40 - 60 Hz)

max. 10 A rapid, 6 A slow Fuse rating

Power consumption 5 VA

4 A Max. current per output Total 6 A Amplifier sensitivity 1 μΑ Min. current from UV tube

or ionisation probe 5 μΑ

Flame detector cable

- ionisation probe max. 20 m cable length - UV tube max. 2 m cable length Flame detector

- Ionisation probe

 UV tube type UVZ 780 red Weight incl. base 200 g Mounting attitude any

-0 °C ... +60 °C Permissible ambient temp.

APPLICATION TECHNOLOGY FEATURES

1. Flame detection

The following types of flame detector can be employed:

- Ionisation probe, where the mains supply provides a neutral earth connection. Suitable for gas burners (signal current from flame cannot be influenced by interference from ignition spark).
- UV sensor type UVZ 780 red, suitable for gas and combi burners

2. Safety

The design/construction of the flame relay FFW 930.1 conforms to the present applicable European standards and regulations.

By use of a UV-cell, the flame sensor needs to be checked prior opening of the valves for their correct function (visually/ manually or with a suitable wiring) of the burner components.

3. Mounting and Electrical Installation

At the base:


- 3 earth terminals, with an additional tag for the burner
- 3 neutral terminals, with a fixed internal through connection to the neutral input, terminal 8.
- 2 separate slide-in plates and 2 fixed threaded knockouts as well as 2 knockouts underneath, facilitate wiring of the base.

General:

- Can be mounted in any position, insulated as per IP 40 standard. The control box and detector probes should however not be subjected to excessive vibration.
- The applicable installation regulations must be observed during installation.

FFW 930.1 FLAME RELAY

SCHEMATIC CONNECTION DIAGRAM

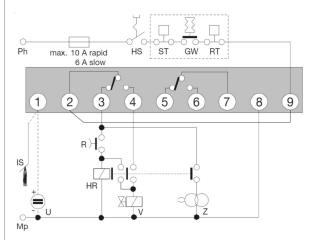


HS Mains switch ST Limit thermostat

GW Gas pressure switch RT Control thermostat

IS Ionisation probe U UVZ 780 red


V Valve


Z Ignition

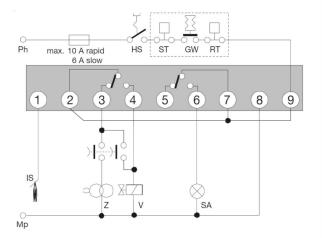


SA External flame signal HR Auxiliary relay

 R Temporary switch for start




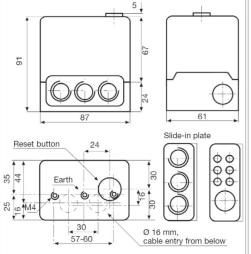

CHECKING THE FLAMMENSIGNAL

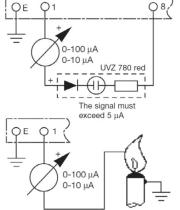

UVZ 780 AND HOLDER

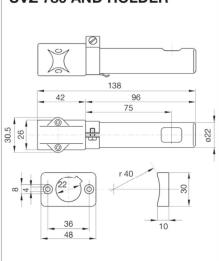

ORDERING INFORMATION

Slide-in plate

ITEM

Control box
Socket
Socket
Socket
Flame relay FFW 930.1
Wiring base 98 9-pin
Wiring base 98 12-in
Flame detector
Support for UVZ
Holder for UVZ

or Cable terminal plate
The above ordering information refers to the standard version.

PG-plate

ITEM NO.

Specifications subject to change without notice.

FFW 930.1

