**SIEMENS** 

**7**867



# Compact universal controllers

**RWF55...** 

The RWF55 is used mainly for controlling the temperature or pressure in oil- or gas-fired heating plants.

If the relevant parameters are set, the RWF55 can be switched to cooling mode and then controls in reverse operation.

The RWF55 and this Data Sheet are intended for use by OEMs which integrate the controllers in their products!

Use

The RWF55 is used either as a 3-position controller without angular positioning feedback or a continuous controller with analog output depending on the setting. An external switch can be used to change to a 2-position controller for controlling 2-stage burners. The integrated thermostat function switches the burner on and off.

LED symbols on the front indicate the following operating states:

- Burner release
- Control pulses OPEN or CLOSED for driving the burner's air damper when using a modulating burner control, or stage I / stage II when using 2-stage burner control
- 2-stage operation
- Position of programmable contact «K6»
- Activation of a ramp function
- Communication via USB, Modbus or Profibus

During operation, the digital displays above the keys shows the setpoint (green), the actual value (red) and – when making parameter settings – the relevant parameters.

### Supplementary documentation

User Manual RWF55U7	'867
Environmental Declaration RWF55 E7	<b>'</b> 867

#### Warning notes



To avoid injury to persons, damage to property or the environment, the following warning notes must be observed!

### Do not open, interfere with or modify the unit!

- All activities (mounting, installation and service work, etc.) must be performed by ualified staff
- Before making any wiring changes in the connection area, completely isolate the plant from mains supply (all-polar disconnection). Ensure that the plant cannot be inadvertently switched on again and that it is indeed dead. If not observed, there is a risk of electric shock haard
- Ensure protection against electric shock haard by providing adeuate protection for the connection terminals
- When selecting the cable material, during installation and when creating the installations with rated voltages below AC 1000 V and the relevant national regulations
- Disconnect the device from the mains supply if there is a risk of touching live parts while work is carried out
- Each time work has been carried out (mounting, installation, service work, etc.), check to ensure that wiring is in an orderly state
- Fall or shock can adversely affect the safety functions. Such units must not be put into operation, even if they do not exhibit any damage.



#### Caution!

The safety, warning and technical notes given in the User Manual on the RWF55 (U7867) apply fully to the present document also!

### Mounting notes

Ensure that the relevant national safety regulations are complied with.

### Standards and certificates



Conformity to EEC directives

- Electromagnetic compatibility EMC (immunity)
- Low-voltage directive, to DIN EN 60730-1

200/108/EC 2006/5/EC



ISO 001: 2008 Cert. 0073



Cert. 38233







### Service notes

- For service purposes, the controller can be slid out of its housing. This can however lead to damage of the housing
- The electrical connections are made via the fixing terminals on the rear of the housing

### **Disposal notes**



The unit contains electrical and electronic components and must not be disposed of together with domestic waste.

Local and currently valid legislation must be observed.

### Type summary

### Compact universal controller

RWF55.50A

- Full version
- 3-position output
- Analog output
- RS-85
- ousing
- Fixing material and seal
- User Manual
- Single pack

### Compact universal controller

RWF55.60A

- Full version
- 3-position output
- Analog output
- RS-85
- Profibus-DP
- ousing
- Fixing material and seal
- User Manual
- Single pack

Packaging variants (20 pieces, without User Manual)

RWF55.51A RWF55.61A

PC software ACS411

### Analog input InP1 (actual value)

For resistance thermometers, thermal elements or standard signals with 2nd order digital filters (configurable).

Sampling time 250 ms

### Resistance thermometer

Туре	Measuring range	Measuring accuracy <sup>a</sup>	Impact of ambient temperature
Pt100 DIN EN 60751	-200850 C (-3281562 F)	≤0,05	50 ppm/K
Pt1000 DIN EN 60751	-200850 C (-3281562 F)	≤0,05	50 ppm/K
L-Ni1000	-50160 C (-58320 F)	≤0,05	50 ppm/K
0135 Ω		≤0,05	50 ppm/K

 $<sup>^{\</sup>mbox{\scriptsize a}}$  Accuracies relate to the maximum measuring range.

Line resistance	Max. 30 $\Omega$ per line with 3-wire circuit
Line balancing	Not reuired with 3-wire circuits.
	With 2-wire circuits, line balancing can be
	performed by making an actual value
	correction

### Thermal elements

Туре	Measuring	Measuring	Impact of ambient
	range	accuracy a	temperature
Fe-CuNi <b>J</b>	-2001200 C	≤0,25	≤100 ppm/K
DIN EN 6058	(-328212 F)		
NiCr-Ni <b>K</b>	-2001372 C	≤0,25	≤100 ppm/K
DIN EN 6058	(-3282502 F)		
Cu-CuNi <b>T</b>	-20000 C	≤0,25	≤100 ppm/K
DIN EN 6058	(-328752 F)		
NiCrSi-NiSi N	-1001300 C	≤0,25	≤100 ppm/K
DIN EN 6058	(-182372 F)		
Pt-RhPt S	-501768 C	≤0,25	≤100 ppm/K
DIN EN 6058	(-58321 F)		
Pt-RhPt <b>R</b>	-501768 C	≤0,25	≤100 ppm/K
DIN EN 6058	(-58321 F)		
Pt-RhPt <b>B</b>	01820 C	≤0,25	≤100 ppm/K
DIN EN 6058	(323308 F)		

<sup>&</sup>lt;sup>a</sup> Accuracies relate to the maximum measuring range.

Cold-function temperature	Internal	
---------------------------	----------	--

### Technical Data (cont'd)

Standard signa	

Measuring range	Measuring accuracy <sup>a</sup>	Impact of ambient temperature
oltage DC 05	≤0,2	200 ppm/K
Input resistance RE 2 M Ω		
oltage DC 010	≤0,1	100 ppm/K
Input resistance RE 2 M Ω		
oltage DC 15	≤0,2	200 ppm/K
Input resistance RE 2 M $\Omega$		
Current 020 mA	≤0,1	00 ppm/K
oltage drop ≤2		
Current20 mA	≤0,1	00 ppm/K
oltage drop ≤2		

a Accuracies relate to the maximum measuring range.

## Analog input InP2 (external setpoint, setpoint shifting)

Resistance measurement 0...1  $\mbox{k}\Omega$  or standard signals without lineariation.

Resistance thermometer

Sampling time	750 ms	
Resistance (2-wire circuit)	01 kΩ linear	
	≤0.05	
	50 ppm/K	

### Standard signals

Measuring range	Measuring accuracy <sup>a</sup>	Impact of ambient temperature
oltage DC 05	≤0,2	00 ppm/K
Input resistance RE 2 M $\Omega$		
oltage DC 010	≤0,1	00 ppm/K
Input resistance RE 2 M $\Omega$		
oltage DC 15	≤0,2200 ppm/K	
Input resistance RE 2 M $\Omega$		
Current 020 mA	≤0,1	00 ppm/K
oltage drop ≤2		
Current20 mA	≤0,1 °	00 ppm/K
oltage drop ≤2		

<sup>&</sup>lt;sup>a</sup> Accuracies relate to the maximum measuring range.

### Analog input InP3 (outside temperature)

For resistance thermometers in 2-wire circuit, with fixed filter time constant.

Sampling time	6 s

### Resistance thermometer

Туре	Measuring range	Measuring accuracy <sup>a</sup>	Impact of ambient temperature
Pt1000 DIN EN 60751	-200850 C (-3281562 F)	≤0,05	50 ppm/K
L-Ni1000	-50160 C (-58320 F)	≤0,05	50 ppm/K

<sup>&</sup>lt;sup>a</sup> Accuracies relate to the maximum measuring range.

### Binary input D1

Potentialfree contact for the following functions, depending on the configuration:

- No function
- Setpoint shifting
- Setpoint changeover
- Alarm input

### **Binary input D2**

Potentialfree contact for operating mode changeover:

Burner modulating, if contacts D2 and D	LED operating mode, 2-stage, does not
are open	light up on the front
Burner 2-stage, if contacts D2 and D	LED operating mode, 2-stage, lights up
are closed	on the front

### Monitoring the measuring circuit

In the event of error, the outputs assume defined states (configurable).

Measuring	Measured value	Sensor/line has	Sensor/line
transducer	crossed limit	short-circuit	interrupted
Resistance	•	•	•
thermometer			
Thermal elements	•		•
oltage			
DC 15	•	•	•
DC 05	(●)		
DC 010	(●)		
Current			
DC20 mA	•	•	•
DC 020 mA	(●)		

detected

<sup>(•)</sup> detected only if measuring range is exceeded

<sup>---</sup> not detected

### **Controller outputs**

OutP

alvanic separation between supply voltage, analog inputs, and controller outputs.

Relay K1 (NO contact) 1P, 1N (burner re	lease)
Contact rating	Max. 2 A at AC 20 at cos φ 0.6
Contact life	250,000 switching cycles at high-fire
Contact protection	aristor
Power supply for transducer G+, G-	DC 2 ±10/max. 30 mA, short-circuit-
	proof

The following relay data are those specified by the supplier.

Relay K2, KQ (controlling element OPEN)	
Contact rating	Max. 2 A at AC 50 and cos φ 0.6
Contact life	200.000 switching cycles at high-fire
Contact protection	RC combination
Relay K3, KQ (controlling element CLOSE	)
Contact rating	Max. 2 A at AC 20 at cos φ 0.6
Contact life	200.000 switching cycles at high-fire
Contact protection	RC unit
Relay K6 (NO contact), 6P, 6N (multifunctional relay)	
Contact rating	Max. 2 A at AC 20 at cos φ 0.6
Contact life	200.000 switching cycles at high-fire
Contact protection	aristor

Relay data are those specified by the supplier.

Analog output A+, A-		
oltage	DC 010 short-circuit-proof	
Load resistance	RLoad ≥500 Ω	
Accuracy	≤0.25, ±50 ppm/K	
Current	020 mA/20 mA	
Load resistance	RLast ≤500 Ω	
Accuracy	≤0.25, ±50 ppm/K	
Baudrate	800 Baud	
	600 Baud	
	1200 Baud	
	3800 Baud	
Protocol	Modbus	
Unit address	1	

Interface RS-85

Profibus interface

Only present with RWF55.6

### Technical Data (cont'd)

Controller	Type of controller	3-position controller and continuous
		controller
	Controller structure	P/PI/PD/PID
	Sampling time	250 ms
Electrical data	Power supply (switching network section)	AC 11020 10/-15
		863
	Electrical safety	To DIN EN 60730, part 1
		Overvoltage category III
		Degree of contamination 2
	Safety class I	With internal separation from SEL
		electrical circuits
	SEL voltage	Max. 30
	Power consumption	Max. 20 A
	Data backup	EEPROM
	Electrical connection	At the rear via screw terminals
	- Cross-sectional area	0.251.5 mm fine-wired
	- Stranded wire with	- Ferrules to DIN 6228
		<ul> <li>Pin-type cable socket to DIN 6231</li> </ul>
		<ul> <li>Crimp-type cable socket in fork-form for</li> </ul>
		M3 thread (dimensions to DIN 6237)
	With UL applications	Use of the cable lug or ferrules to
		UL86A-B (UL listed or recognied)
	Tightening torue	0.5 Nm
	Electromagnetic compatibility	DIN EN 61326-1
	Emitted interference	Class B
	Immunity	Meeting industrial reuirements
Housing	Type of housing	Made of Makrolon for control panel
		mounting to DIN IEC 6155
		(use in indoor)
	Color	Light-grey RAL7035
	Mounting depth	122 mm
	Mounting position	Optional
	Degree of protection	To DIN EN 6052
		Front side IP66
		Rear IP20
	Weight	(Fully euipped)
	- RWF55.5	Approx. 32 g
	- RWF55.6	Approx. 32 g

### Technical Data (cont'd)

### **Environmental** conditions

Storage	DIN IEC 60721-3-1
Climatic conditions	Class 1K3
Mechanical conditions	Class 1M2
Temperature range	-070 C
umidity	5 r.h.
Transport	DIN IEC 60721-3-2
Climatic conditions	Class 2K2
Mechanical conditions	Class 2M2
Temperature range	-070 C
umidit y	5 r.h.
Operation	DIN IEC 60721-3-3
Climatic conditions	Class 3K3
Mechanical conditions	Class 3M3
Temperature range	-2050C
umidity	5 r.h.
Installation altitude	Max. 2000 m above sea level



### Attention!

Condensation, formation of ice and ingress of water are not permitted


### Segment display

eight of numerals	
- Upper display	10 mm
- Lower display	7 mm
Color	
- Upper display	Red
- Lower display	reen
Digits	(including 0, 1 or 2 decimal places,
	configurable)
Range of display	-1

The following functions are included in the RWF55:

- Digital PID controller with a 3-position and analog output of the calculated output level
- The controller can be switched to a 2-position controller for controlling 2-stage burners
- Automatic thermostat (or pressure controller) function in low-fire operation
- Shift controller for weather-dependent setpoint shifting
- Minimum limiter and maximum limiter for the boiler temperature or boiler pressure
- Temperature controller to DIN EN 157
- Potential-free configurable contact
- Manual operating mode
- Self-setting function
- Parameteriation and visualiation via USB interface and PC software ACS11
- Communication via serial Modbus interface or optional Profibus interface
- Ramp functions (cold start/thermal shock protection)
- eating/cooling

#### Block structure

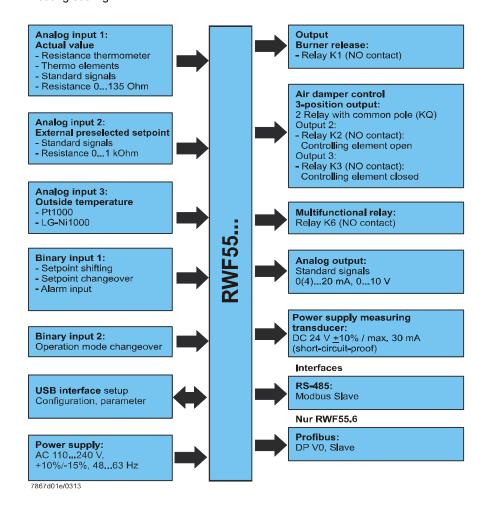

#### Function of the controller when used for burner control

Low-fire operation Low-fire operation means that only small amounts of energy are drawn from the boiler.

With the relay 1 burner release, the 2-position controller controls the set setpoint by switching the burner on and off like a thermostat. An adustable switching differential ensures that the burner's switching freuency can be selected to help protect the

material.

igh-fire operation igh-fire operation means that large amounts of energy are drawn from the boiler with

the burner running continuously. The RWF55 controls the reuired output using the 3-

position or analog output.

Binary input 1 (changeover of operating mode)

Using a potential-free contact, the RWF55 can be switched from the modulating mode

to 2-stage operation.

Binary input 2 (setpoint shifting or setpoint changeover)

In the case *setpoint shifting* is configured, the current setpoint is shifted by an adustable amount. Configuration of *setpoint changeover* provides changeover between 2 setpoints adusted on the RWF55. If analog input 2 is configured for an *external setpoint*, changeover is provided between the setpoint adusted on the RWF55 and an

external setpoint.

Multifunctional relay Potential-free contact K6 can be assigned a number of functions.

Example: Limit value supervision

Operation The RWF55 is operated and programmed with buttons on the front of the unit. During

operation and programming, the 7-segment displays show the parameter value and

parameter name.

Weather-compensated setpoint shifting

The RWF55 can be configured so that weather-compensated setpoint shifting is

activated when an L-Ni1000 outside sensor or a Pt1000 is connected.



#### Attention!

Each RWF55 must have its own separate outside sensor (no parallel connection).

### Analog input 1

To acuire the actual value, the following sensors can be connected to the RWF55:

		Measuring range
Resistance thermometer	Pt100 DIN EN 60751	-200850 C (-3281562 F)
in 2-wire or	Pt1000 DIN EN 60751	-200850 C (-3281562 F)
3-wire technology	L-Ni1000	-50160 C (-58320 F)
	$0135~\Omega$	
Thermal element	Fe-CuNi J DIN EN 6058	-2001200 C (-328212 F)
	NiCr-Ni K DIN EN 6058	-2001372 C (-3282502 F)
	Cu-CuNi <b>T</b> DIN EN 6058	-20000 C (-328752 F)
	NiCrSi-NiSi N DIN EN 6058	-1001300 C (-182372 F)
	Pt-RhPt S DIN EN 6058	-501768 C (-58321 F)
	Pt-RhPt <b>R</b> DIN EN 6058	-501768 C (-58321 F)
	Pt-RhPt <b>B</b> DIN EN 6058	01820 C (323308 F)
Linearized standard signals	DC 05	≤0,2
	DC 010	≤0,1
	DC 15	≤0,2
	020 mA	≤0,1
	20 mA	≤0,1

The power provided for the measuring transducers is DC 2 10 / max. 30 mA.

Analog input 2 (external setpoint, setpoint shifting)

The setpoint of the controller can be influenced by a signal at analog input 2. The influence can be scaled.

Alternatively, the input can be used as a feedback input of the actuator position and this feedback of position can be read via RS-85 interface.

The following detectors are used as signal:


		Measuring range
Resistance thermometer	01 kΩ linear	
in 2-wire technology		
Linearized standard signals	DC 05	≤0,2
	DC 010	≤0,1
	DC 15	≤0,2
	020 mA	≤0,1
	20 mA	≤0,1


### Analog input 3 (outside temperature)

For detection of the outside temperature, the following detectors can be connected to the RWF55:

		Measuring range
Resistance thermometer	Pt1000 DIN EN 60751	-200850 C (-3281562 F)
in 2-wire technology	L-Ni1000	-50160 C (-58320 F)

RWF55

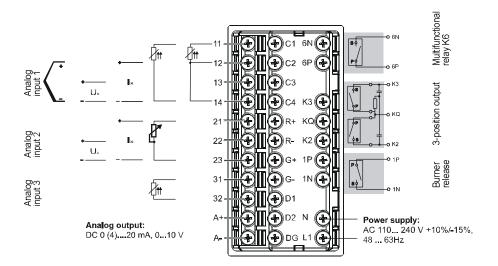

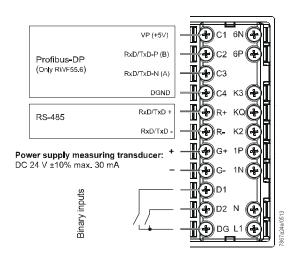

Legend

The RWF55 contains these components

1N	Relay K1: NO-contact
1P	Relay K1: Pole
6N	Relay K6: NO-contact
6P	Relay K6: Pole
DND	Functional earth
lx	Current input
K2	Relay: Controlling element OPEN
K3	Relay: Controlling element CLOSED
V	Common nolo

K Common pole Pole

RxD/TxD-P (B) Receive / Send data - Plus, B-lead
RxD/TxD-N (A) Receive / Send data - N, A-lead
RxD/TxD Receive / Send data - Plus
RxD/TxD Receive / Send data - Minus

S NO-contact
Ux Power supply input
P (5) Supply voltage - Plus

